

PERMA-PIPE®

Dual-Gard D.I. Preinsulated Ductile Iron Piping Systems

Installation Manual

ISSUE 1

June 15, 1998

PERMA-PIPE, INC.

A Subsidiary of MFRI, Inc.

7720 North Lehigh Avenue

Niles, Illinois 60714-3491

Phone (847) 966-2235

FAX (847) 470-1204

<http://www.permapipe.com>

Dual-Gard D.I. Contents

PREFACE	1
GENERAL PRECAUTIONS	1
1.0 INTRODUCTION	1
2.0 SCOPE AND APPLICATION	1
3.0 EQUIPMENT AND MATERIAL	2
3.01 Equipment and Material.	2
3.02 Receiving, Handling and Storage.	2
3.02.1 Receiving.	2
3.02.2 Material Handling.	2
3.02.3 Pipe Storage.	3
4.0 PREPARATION AND SET UP	4
5.0 EXCAVATION	5
5.01 Trenching.	5
5.02 Bell Holes.	6
5.03 Special Trench Conditions.	6
5.03.1 Rock Bottom Trench.	6
5.03.2 Unstable Soil.	6
5.03.3 Granular Soil.	6
5.03.4 Over-excavation.	6
6.0 DUAL-GARD D.I. ASSEMBLY	7
6.01 Layout.	7
6.02 Lowering of the Piping.	7
6.03 Pipe Connections.	7
6.03.1 Preparation of Pipe Ends.	7
6.03.2 Application of Lubricant.	7
6.03.3 Joining Procedure.	8
6.03.4 Field Alterations of Pipe Length.	8
6.04 Concrete Thrust Blocks.	8
6.05 Hydrostatic Test of Carrier Pipe.	10
7.0 FIELD JOINT CLOSURE	10
8.0 ALTERATIONS AND REPAIRS	10
8.01 Alterations.	10
8.02 PVC Jacket Repair.	10
9.0 BACKFILL PROCEDURES	11
9.01 Materials.	11
9.02 Backfill Description.	11
9.03 Initial Backfill.	11
9.04 Final Backfill (85%) Compaction.	12

NOTICE

This installation manual and the recommendations it contains are reasonably believed to be accurate and reliable. However, due to variations in environment, application or installation, and because the conditions of use are beyond our control, the user of this manual assumes all risk connected with the use thereof. The installer of these piping products is ultimately responsible for his own work and, thus, the integrity of the system. PERMA-PIPE assumes no responsibility for the use of information presented herein and, hereby, expressly disclaims all liability in regard to such use.

Any technical suggestions or advice with respect to storage, handling, installation or use of Seller's materials by or on behalf of Seller is an accommodation to Purchaser for which Seller shall have no responsibility unless responsibility, therefore, has been expressly assumed in writing by the President or a Vice-President of Seller.

PREFACE

The consulting engineer has been provided with information on what to expect from a PERMA-PIPE Dual-Gard D.I. system once it is installed. However, the true operating success of the system is greatly dependent upon proper installation. PERMA-PIPE is committed to supporting the installation of a complete and high-quality piping system. This support includes clear and concise installation recommendations and expert field technical assistance.

The objective of this manual is to aid the installer on recommended installation procedures of a Dual-Gard D.I. piping system. This booklet contains information on all aspects of the installation process, from initial receiving and storage through final backfill.

The manual has been divided into sections, one section for each phase of the installation process. Each section contains an explanation and illustrations on proper installation procedures.

By following these step by step instructions, the installing contractor should achieve a successful installation.

GENERAL PRECAUTIONS

These instructions are for general applicability. If they conflict with contract, specifications or drawings specific to the job, the job-specific documents take precedence. If in doubt, check with your project engineer or PERMA-PIPE field technical representative.

Carefully observe job work sequence to avoid errors and expensive mistakes. **DO NOT skip steps.**

DO NOT complete backfilling the trench until all testing and inspection is completed and accepted by the appropriate authority.

1.0 INTRODUCTION

Dual-Gard D.I. is a completely preinsulated, prefabricated system designed for the distribution of chilled and low temperature hot water and condensate. The pipe is suitable for use at a maximum working pressure of 250 psig (plus 100 psi surge allowance) and maximum temperature of 150°F (SBR gasket) or 225°F (EPDM gasket).

The standard Dual-Gard D.I. system consists of a ductile iron carrier pipe with integral, gasketed bell joint, polyurethane foam insulation, and a polyvinyl chloride (PVC) outer jacket for carrier pipe 12 inches and smaller or polyethylene (PE) outer jacket for carrier pipe 14 inches and larger. The features that make Dual-Gard D.I. unique extend beyond the product itself. An expert project design staff tailors each system to meet the needs of the customer. Also, an experienced technical service staff is available to provide assistance that will assure a quick and smooth installation.

A series of factors contribute to a reliable, high quality piping system, such as design, construction, delivery, installation and testing, with stringent quality control procedures applied at every step. The importance of proper installation practices for any piping system and adherence to this procedure, in particular, cannot be overstated. When installed according to the recommended practices presented in this manual and from PERMA-PIPE technical service, Dual-Gard D.I. will provide excellent service, meeting or exceeding expectations.

2.0 SCOPE AND APPLICATION

The scope of this procedure is limited to Dual-Gard D.I. piping systems.

This procedure applies to the customer-designated contractor who will perform the installation. A factory-trained, experienced field installation instructor will be present at critical periods during the installation, when required by the specifications, and/or where

the furnishing of such service is included as a part of the customer's purchase order.

Trouble-free, efficient operation will result from close cooperation between the installing contractor and the field installation instructor. PERMA-PIPE is committed to supporting the proper installation of a complete and high quality piping system. Nevertheless, ultimate responsibility for proper installation rests with the installing contractor.

3.0 EQUIPMENT AND MATERIAL

3.01 Equipment and Material.

In order to install Dual-Gard D.I., PERMA-PIPE has furnished the following:

1. Pipe assemblies, fittings and accessories
2. Field joint closure materials (see applicable chapters of Section 7.0)

Installing contractor must furnish the following:

1. Crane and excavation equipment
2. Sanding tool, circular saw and blades
3. Other materials as described in applicable chapters of Section 7.0.

3.02 Receiving, Handling and Storage.

3.02.1 Receiving.

The piping was inspected and loaded with due care at the factory. It is the carrier's responsibility to deliver the shipment in good condition. It is the responsibility of the receiver to ensure there has been no loss or damage. The following procedures are suggested to minimize problems:

- It is recommended that the PERMA-PIPE field representative be present during receipt of the shipment.
- Obtain the following items from the carrier:
 1. Part Drawing Layout (PDL), if applicable
 2. Packing slip
 3. Bill of Lading
 4. MSDS Sheets

NOTE: Material Safety Data Sheets (MSDS) for each of the components described in this manual should be reviewed for safety precautions and protective equipment requirements.


- Check all shipped materials against the packing slip for shortages.
- Visually inspect the materials of shipment as they are unloaded.
- List all damages and/or shortages on the packing slip and the bill of lading. **DO NOT dispose of any damaged material.** The carrier will notify you of the necessary procedure to be followed.
- Submit claims to the carrier. Failure to do so will result in loss of compensation for missing or damaged material.
- Notify your PERMA-PIPE field representative of these claims if assistance is required. PERMA-PIPE terms are F.O.B. our plant, full freight allowed to project site, unless specified differently by contract or purchase order.
- Shortages and damaged materials are normally not reshipped, unless requested to do so. If replacement material is needed, contact a PERMA-PIPE sales representative.

3.02.2 Material Handling.


The means by which Dual-Gard D.I. is unloaded and handled in the field is the decision and responsibility of the receiver. PERMA-PIPE's PVC jacket is designed to resist corrosion and is strong enough to withstand heavy soil loads and system pressures. The jacket is extremely durable. However, if damage does occur due to improper handling, the jacket must be repaired at the customer's expense. The following procedures are suggested to minimize problems:

- Support each assembly with pipe size of 8 inches or larger with nylon slings during all phases of handling. The nylon slings prevent severe scratching and/or chipping of the PVC jacket. Nylon slings are provided free of charge by PERMA-PIPE.

- **DO NOT use steel cables or chains for handling Dual-Gard D.I. assemblies.**

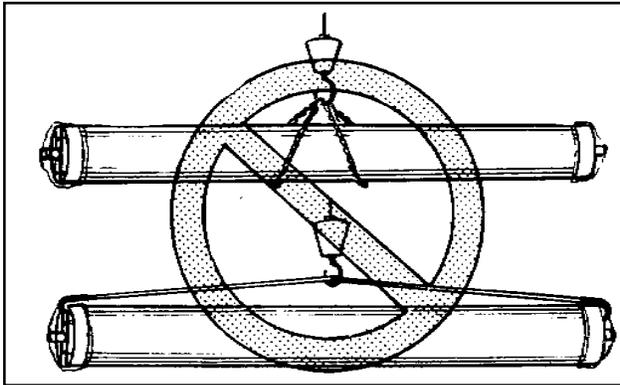

- Use two slings where possible. The use of two slings provides much more control of pipe movement. This greatly decreases the chances of personal injury and/or damage to the pipe from contact with the truck, nearby buildings and equipment.

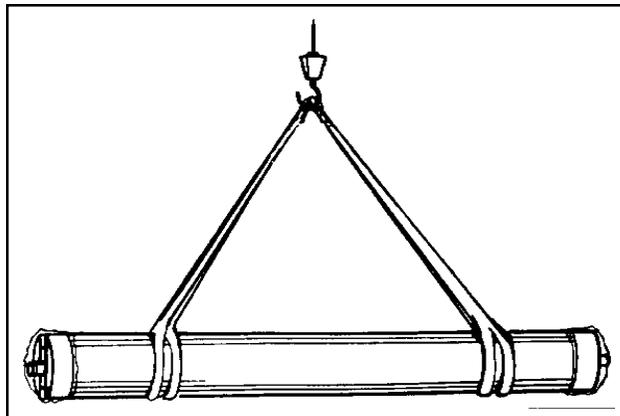

- Choke the slings together as shown. Space the slings about 10 feet apart.
- **DO NOT drop the Dual-Gard D.I. assemblies or strike them against hard surfaces at any time.**
- If an accident occurs, inspect the jacket and pipe ends for damages. Repair if necessary (see Section 8.02).


3.02.3 Pipe Storage.

Dual-Gard D.I. assemblies can sustain damage if not stored properly. Proper storage of the product is the responsibility of the receiver. The following procedures are suggested to minimize problems:


- If possible, store the pipe in a warehouse or heated shelter. If this is not pos-

sible, store the pipe on high ground to avoid ingress of water into pipe ends.

- Dual-Gard D.I. can be stored during the winter months (or for prolonged periods of time) with minimal special handling.
- When stacking the Dual-Gard D.I. for storage, stack it in the same fashion that it was received.

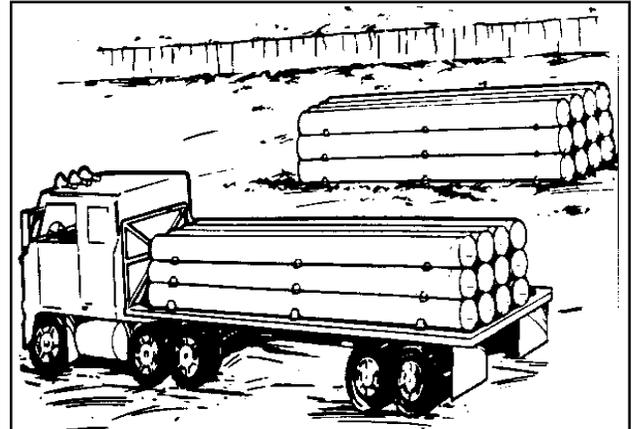

- Wooden shipping braces must be used as runners between the layers of pipe. PERMA-PIPE recommends stacking pipe no more than six feet high.

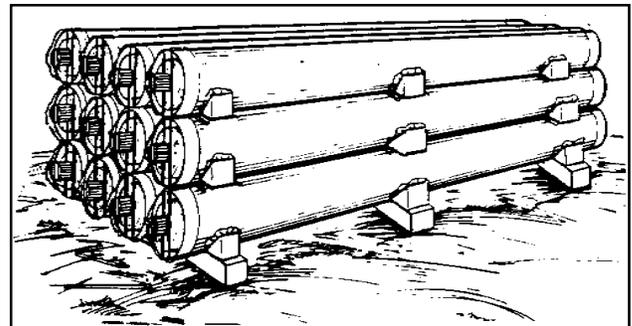

- **DO NOT remove plastic covers or end caps from the Dual-Gard D.I.** Dirt and debris must be prevented from entering the pipe.
- PERMA-PIPE recommends using a light-colored or opaque tarpaulin to cover stored pipe. This cover will protect it against ultraviolet (UV) rays that will discolor the PVC jacket.
- Store all field joint materials indoors and in a dry area. Keep the materials in their shipping containers. The recommended storage temperature range is 60°-85°F (18°-29°C).

4.0 PREPARATION AND SET UP

PERMA-PIPE cannot anticipate every circumstance that might involve hazard. The warnings in this procedure are, therefore, not all inclusive. The installing contractor must satisfy himself that each procedure, tool, work method or operating technique is safe.

PERMA-PIPE recommends that only qualified personnel perform all steps of the installation procedure.

Proper implements, tools and equipment should be used for placement of the pipe in the trench to prevent damage. In no case should pipe or accessories be dropped into the trench. Additional handling and joining procedures are covered elsewhere in this manual. Pipe laying generally should commence at the lowest elevation and terminate at manholes, service branches or clean outs.

5.0 EXCAVATION

NOTE: All federal, state and local regulations concerning jobsite safety should be observed.

5.01 Trenching.

All types of flexible pipe derive some of their strength from the passive soil resistance on the sides of the pipe. Therefore, the proper excavation of the trench is very important to ensure a structurally sound system. Usually, the centerline dimensions for the placement of the pipe in the trench can be found in the drawings.

Dual-Gard D.I. is designed to handle normal soil and H-20 loading. If PERMA-PIPE's recommended procedures are followed, a minimum burial depth is required at taxiways, runways, railroads and other areas of high surface loading conditions. It is recommended that the customer contact both PERMA-PIPE and the local authority for more specific burial instructions.


The trench floor should be completely cleared of stones and rocks and covered with a 4-inch compacted bedding. The bedding soil should correspond with the soil description.

During excavation, an unstable soil condition may be encountered, particularly in installations with deep burials. If this occurs, shore the trench walls before lowering the piping assembly into the trench.

Local, state and federal regulations for shoring should be followed where applicable. As the shoring is removed, it should be replaced with backfill soil.


Organic soils or plastic clays and silts with high liquid limits may be encountered that are incapable of supporting the pipe. Remove the poor soil, and replace it with the proper bedding soil to a depth that will provide a firm stable foundation.

The minimum recommended trench width for single pipe is 12 inches plus the diameter of the conduit.

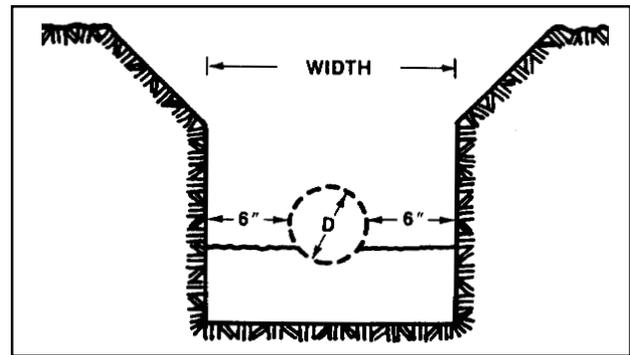


For multi-pipe installations, centerline dimensions can usually be found in the drawings.

If the centerline dimensions are not specified in the drawings, PERMA-PIPE recommends computing the width of a multi-pipe trench by adding 6 inches to the combined radii of each pair of pipes (value X in the figure below) and, then, adding another 12 inches and the combined radii of the two outermost pipes to allow for clearance.

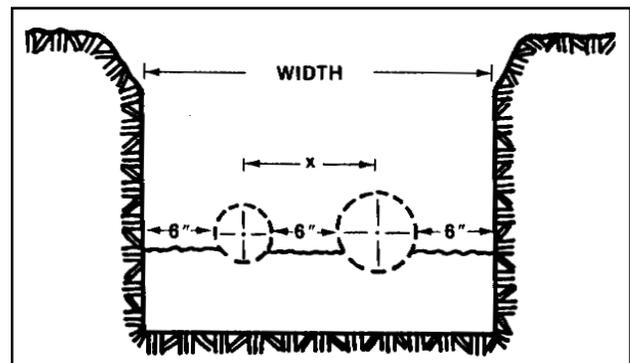


The total trench depth should allow for a 4-inch bedding, the conduit diameter and a minimum 24 inches cover depth above the conduit. See contract drawings for specific pipe burial depths. For depths less than 24 inches, contact PERMA-PIPE.

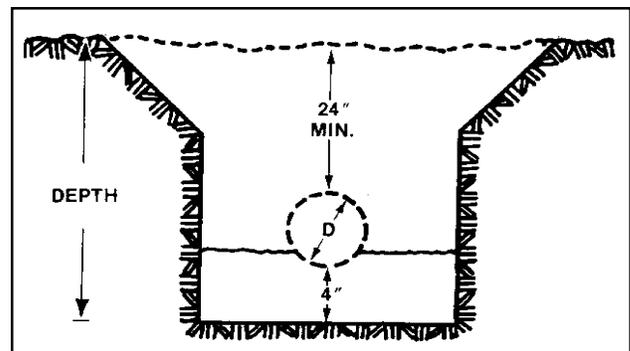


A minimum bedding of 4 inches must be raked uniformly along the entire length of the run. The bed of the run must be graded to a minimum slope of 1 inch per 40 feet. The bedding material should conform with the recommendations in the **Backfill** section of this manual (see Section 9.0).

5.02 Bell Holes.

Digging bell holes at field joint locations allows room for pipe joining, field joint closure and testing. A common way to dig bell holes is to cut across the trench with a backhoe:

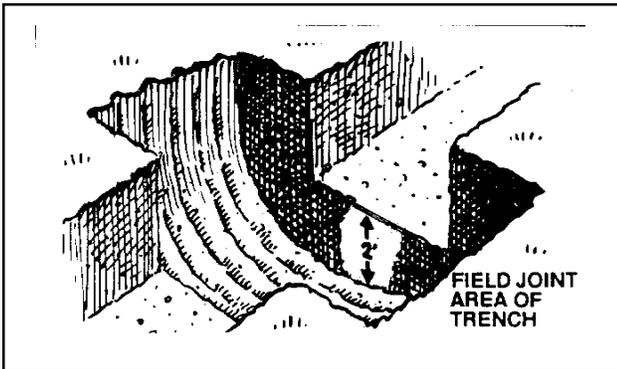

- Cut into the side of the trench and 1½ to 2 feet below the system grade.

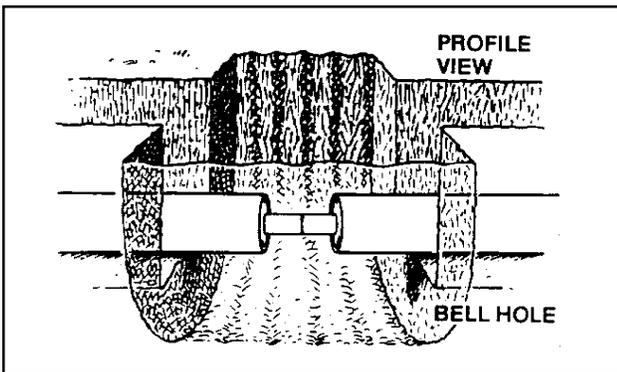


- Dig the bell holes before lowering Dual-Gard D.I. into the trench.

5.03 Special Trench Conditions.


5.03.1 Rock Bottom Trench.

- A rocky or uneven trench foundation should be covered with a firm soil or gravel before bedding is constructed.

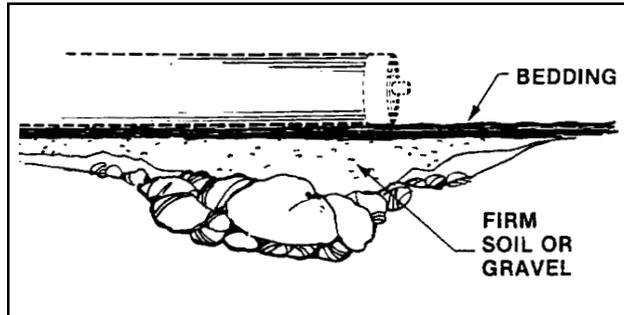

5.03.2 Unstable Soil.


- When trenching in unstable soil, **DO NOT** lay any Dual-Gard D.I. until the trench walls are stabilized with staybracing or shoring.

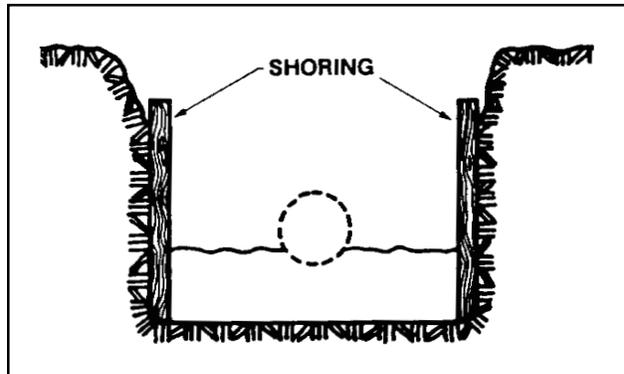

- Replace and compact the soil as the shoring is removed.

5.03.3 Granular Soil.

- In granular soil, the trench wall should be sloped at the natural angle of repose.

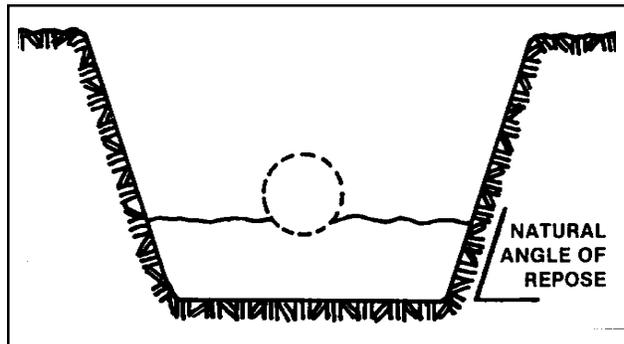

5.03.4 Over-excavation.

- Any accidental over-excavation should be filled with bedding material and compacted to 90-95% modified proctor.

6.0 DUAL-GARD D.I. ASSEMBLY


NOTE: When installing pipe in ambient temperatures below 60°F, contact your PERMA-PIPE field representative for special cold weather procedures.

6.01 Layout.

After trench excavation is complete and installation of the pipe is to start, the Dual-Gard D.I. assemblies should be distributed along the trench top.

6.02 Lowering of the Piping.

- Remove free-standing water in the bell hole and trench before lowering assemblies. Bell holes and bedding must be dry during pipe assembly installation.

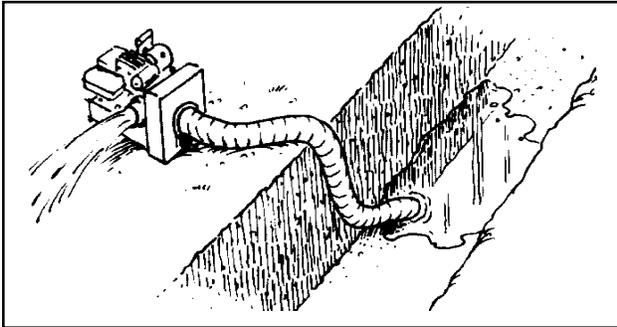

- **DO NOT** remove the protective end covers until the carrier pipes are to be joined.

- Lower Dual-Gard D.I. assemblies into the trench. **DO NOT** drop piping.


6.03 Pipe Connections.

The inside of the socket, the gasket and the plain pipe end (spigot) must be kept clean throughout the assembly. Joints are only as water-tight as they are clean. If the joint is somewhat difficult to assemble, inspect for proper gasket positioning, adequate lubrication, and removal of foreign matter in the joint.

6.03.1 Preparation of Pipe Ends.

- All foreign matter in the socket must be removed, i.e., mud, sand, cinders, gravel, pebbles, trash, frozen material, etc.
- Thoroughly inspect the gasket seat to be certain it is clean. Foreign matter in the gasket seat may cause a leak.
- Wipe the gasket clean with a clean cloth.


- Flex the gasket and place it into the socket with the rounded bulb end entering first. Looping the gasket in the initial insertion will facilitate seating the gasket heel evenly around the retainer seat. Smaller sizes require only one loop. With larger sizes, loop the gasket at the 12 o'clock and 6 o'clock positions.

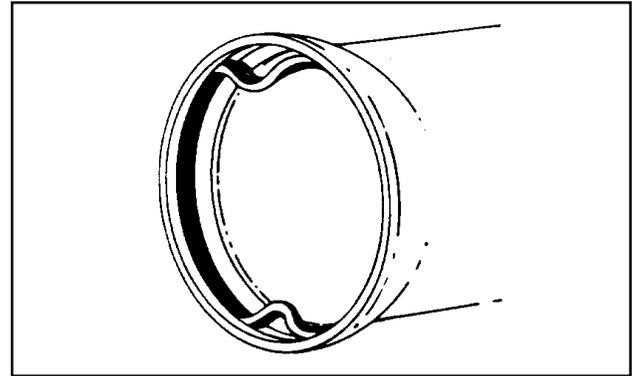

NOTE: When installing pipe in subfreezing weather, the gaskets must be kept at a temperature of at least 40°F prior to their use. Store gaskets in a heated area or immerse in a tank of warm water. If gaskets are kept in warm water, they must be dried before placing in the pipe socket.

6.03.2 Application of Lubricant.

- Apply a thin film of lubricant to the inside surface of the gasket (that which will come in contact with the spigot). Lubricant is non-petroleum base, commercial grade provided by PERMA-PIPE.

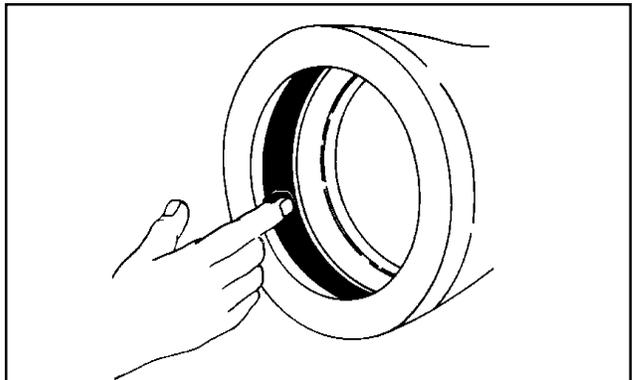


- Clean all foreign matter from the end of the spigot to be inserted.
- Apply a thin film of lubricant to the outside of the spigot for approximately 3 inches from the pipe end.


NOTE: DO NOT allow the spigot to touch the ground or trench side after lubricating. Foreign matter may adhere to the spigot and cause a leak.

6.03.3 Joining Procedure.


- Align the spigot and insert into the socket until it just makes contact with the gasket. This is the starting point for the final assembly of the joint.

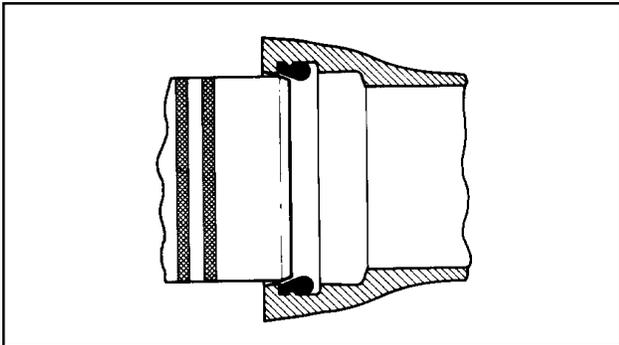

- Complete the joint assembly by pushing the spigot into the socket until the front edge of the second stop mark is flush with the bell face. If properly installed, the gasket becomes compressed against the spigot and forms a water-tight seal.

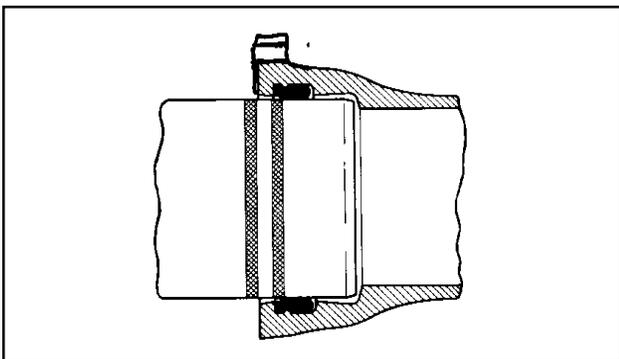

- For joint assemblies 8 inch and smaller, seat the spigot in the socket by using a crowbar or spade at the opposite end of the pipe and pushing against the face of the bell.

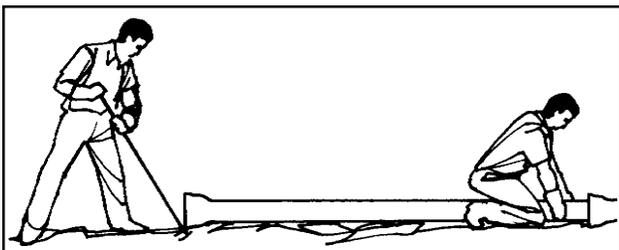

- For larger joint assemblies, guide the spigot into the socket by hand. Then use a backhoe to push the spigot until the second stop mark is flush with the bell face. Use a timber header between the pipe end and the backhoe bucket to avoid damage to the pipe.

NOTE: If the spigot can not be inserted with the application of reasonable force by the methods indicated, remove the spigot and inspect for proper gasket position, adequate lubrication and removal of foreign matter in the joint.

6.03.4 Field Alterations of Pipe Length.

- Determine amount which standard units are to be shortened. Using this figure, measure back from end of pipe and mark the outer jacket. Cut completely through unit.

- Measure back a distance equal to a factory-prepared pipe end and cut through jacket only. **DO NOT cut inner pipe.**

- To remove jacket and urethane foam from pipe end, cut longitudinally into three segments and peel the insulation and jacket off the pipe. Clean the pipe of any residual urethane.

- Measure back a distance equal to the stop mark distance on the factory end and make a stop mark on the newly cut pipe.

- Using a coarse file or a portable grinder, bevel the outside of the cut end about 1/4 inch at an angle of about 30°.

- Apply two coats of bitumastic over the insulation. Apply second coat one hour after applying the first coat. **DO NOT thin bitumastic.**

NOTE: Bitumastic must cover the insulation surface and approximately 1/2 inch of the pipe surface and outer jacket surface.

6.04 Concrete Thrust Blocks.


Thrust blocks must be included to prevent any pipe movement as a result of changes in temperature. Ductile iron pipe has the ability to absorb this expansion or contraction, but the pipe must be restrained with thrust blocks for proper control. The thrust

block must encapsulate the fitting to be effective in both tension and compression. Poured concrete is the preferred method of anchoring the Dual-Gard D.I. assemblies.

NOTE: Pour thrust blocks before hydrostatic testing of the pipe.

Thrust blocks must be located at:

1. All changes in direction, such as tees and elbows (both horizontal and vertical).
2. All changes in size such as reducers.
3. All terminal or "dead" ends, such as caps, plugs and closed valves.
4. All valves, in order to support their weight and prevent excessive torque on the pipe connections.

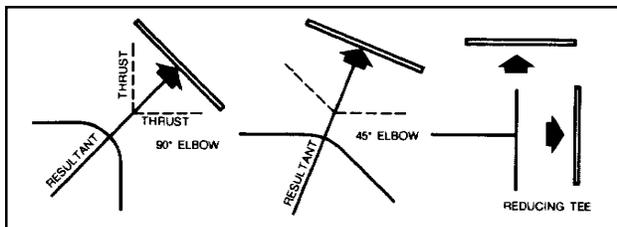

The design of the thrust block is dependent upon soil conditions, size and number of pipes, the forces due to thermal stress, and the type of fittings involved. Four conditions must be present if the thrust blocks are to do their job:

1. The bearing area must be adequate to resist the pressure force.
2. The bearing surface must rest directly against undisturbed soil.
3. The face of the block bearing surface in the soil must be perpendicular to the resultant direction of the thrust.
4. Thrust blocks must encase a minimum of 2 inches of the outer jacket with a minimum 6 inch thickness of concrete.

Thrust blocks are made of concrete. Unless otherwise specified, an acceptable concrete is 1 part portland cement, 2 parts washed sand and 3 parts washed gravel with enough water for a relatively dry mix. The dry mix is easier to shape and offers higher strength.


NOTE: It is important that the concrete be "worked" thoroughly around the elbows for maximum surface contact.

- Fill the entire area between the fittings and the fresh cut trench with concrete. This area must be free of voids.

- Shape the blocks with the designed bearing area against the trench wall. Smaller blocks using a fairly dry mix can be shaped by hand. Larger blocks will require simple forms.


- Undercut the trench beneath the pipes at least 6 inches to give added thrust resistance and to provide for an adequate concrete envelope around the fittings. At least 6 inches of concrete should be over the top of the pipe.

- In any case, the center of the thrust block's bearing surface should coincide with the horizontal center line of the pipes as shown in Figures A and B.

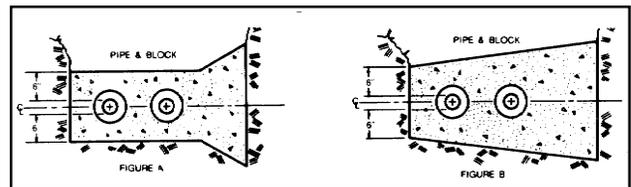


NOTE: Should the soil be unstable in the area requiring a thrust block, it will be necessary to consult an engineer. Unstable soil is a civil engineering problem, and expert advice is necessary.

Blocks should be poured under valves with the necessary steel that can be connected to the valve. This supports the weight of the valve and prevents any torque or twisting action caused by opening and closing the valve.

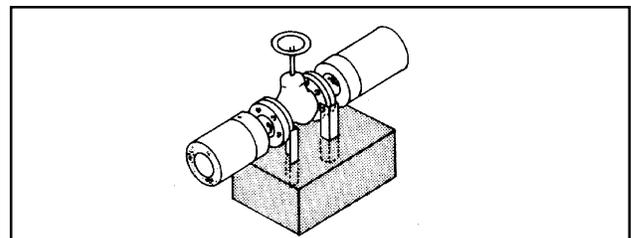


Typical examples of thrust blocks for normal fittings are shown.

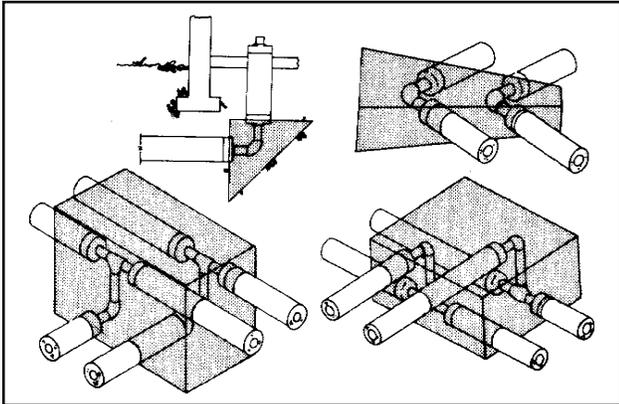

NOTE: For vertical risers, the trench bottom must be undercut and the entire elbow should be covered with concrete. The thrust blocks must bear against firm stable soil.

6.05 Hydrostatic Test of Carrier Pipe.

- Test line at recommended test pressure.

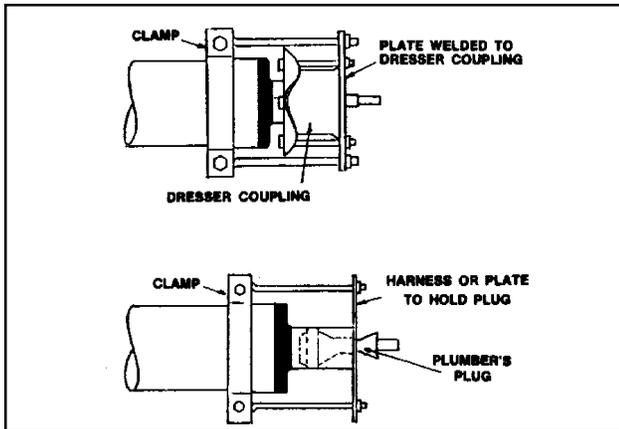

NOTE: DO NOT test the system at a pressure greater than 225 psi.

7.0 FIELD JOINT CLOSURE

After completion of the hydrostatic test, field joint closure is complete.

8.0 ALTERATIONS AND REPAIRS

8.01 Alterations.

All installations of Dual-Gard D.I. require alterations of the piping in order to achieve the proper lengths. See Section 6.03.5 for details on cutting the pipe to length.

8.02 PVC Jacket Repair.

If cracked, a tight seal can be accomplished by patching with PVC cement and fiberglass tape:

- Prime the damaged area.
- Apply PVC cement.
- Apply tape.
- Apply PVC cement.


If damage is a large gouge or hole, use PVC sheet or a piece of regular PVC jacket formed to fit and cement on:

- Prime the damaged area.
- Apply PVC cement.
- Apply PVC patch.

9.0 BACKFILL PROCEDURES

9.01 Materials.

The most crucial part of the backfill process is the compaction of soil underneath and alongside the conduit. A hand tamping device can be constructed easily and economically by joining small diameter pipe. This tool will compact the soil firmly and evenly around the jacket and should be used instead of mechanical tampers when compacting to prevent damage to the Dual-Gard D.I.

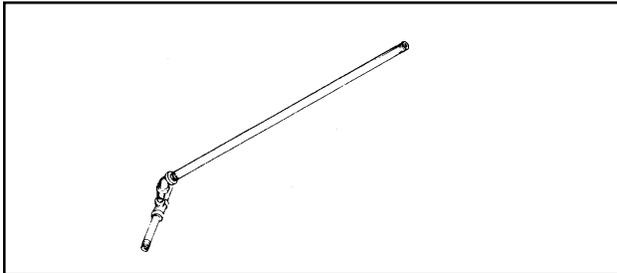

Special analysis of minimum burial depths is required at taxiways, runways, railways and other areas of high surface loading conditions. It is recommended that the customer contact both PERMA-PIPE and the local authority for more specific instructions.

9.02 Backfill Description.


1. Sand or a sand-gravel mixture in which the gravel is either pea gravel or crushed stone without sharp edges.
2. Particles not larger than a half-inch in diameter.
3. 90% of the soil passing a No. 4 sieve.
4. 90% of the remainder retained by a No. 200 sieve.
5. Separate all unsuitable soil from the backfill soil.

9.03 Initial Backfill.


- Prior to backfilling, remove any foreign materials, such as shoring, braces and support blocks.

NOTE: DO NOT use frozen fill, sod, cinders or stones greater than a quarter inch in diameter as primary backfill.

- Carefully compact the area directly around the conduit in 6-inch layers.

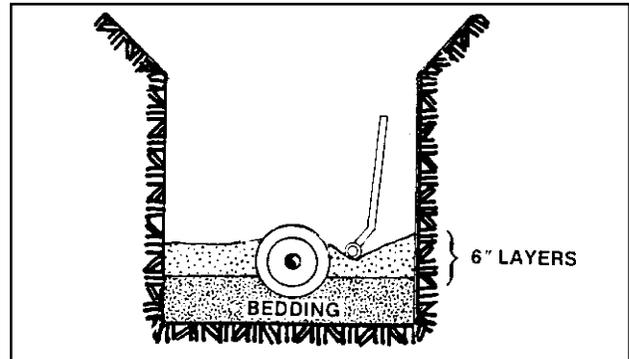

- Proper compaction of the haunching materials, that section of the embedment extending from the bottom of the pipe to the springline, should be performed to provide soil densities as specified by the design engineer.
- Primary backfilling of selected earth should be packed and tamped to 6 inches minimum over the top of the jacket.

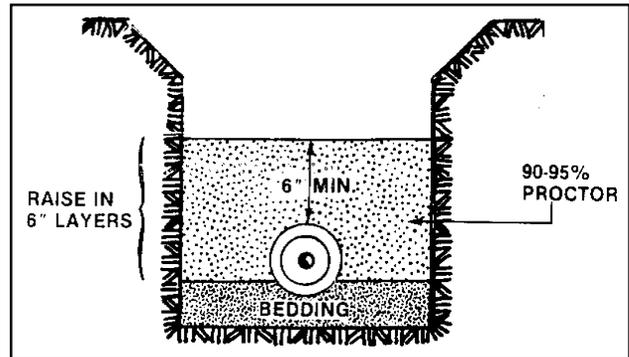


- Compact in 6 inch layers to 90-95% proctor. If surface loading conditions exist, backfill to grade in this manner.
- NOTE: DO NOT use wheeled or tracked vehicles for tamping.**

9.04 Final Backfill (85%) Compaction.

The backfill operation can now be completed by any convenient means. Remainder of backfill should be free of large boulders, and rocks larger than 6 inches in diameter, frozen earth, or foreign matter.

After placement and compaction of pipe embedment materials, the balance of backfill materials may be machine placed. Provide compaction to required soil densities. Use of mechanical compaction equipment to complete the final backfill is suggested, but **DO NOT use mechanical compactors until the conduit is covered with at least 12 inches of firmly compacted soil.**

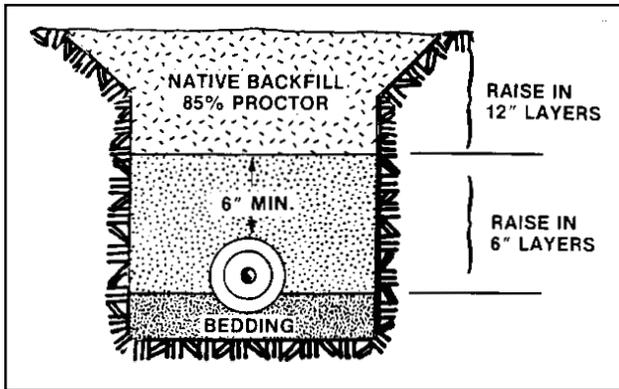

Under normal conditions, backfill to grade in 1-foot lifts and compact to 85% proctor. Native soil can be used, provided it is non-organic and all particles are less than 1 inch in size.